

CAMP SAW

Ultimate camping Tool, Light, Dependable - Item # 10169

Assembly instructions

Wood Blade

- Wood Item # 10174
- Bone Item # 10172 optional
- Metal Item # 10173 optional
- CAMP GRILL Item # 10170 optional

BUCK SAW

1. Unzip the handle.
2. Slide the handle onto the blade.
3. Attach the reduced end.
4. Attach the main handle.
5. Attach the blade.
6. Attach the tensioner.
7. Attach the crossbar.
8. Attach the triangular saw blade.

COOKING RACK

Attach the cooking rack to the main handle.

TRIANGULAR SAW

Attach the triangular saw blade to the main handle.

GROUND PEG

Use a wooden stake in soft ground.

Warning / Advertisment / Advertencia / Warnung

- Eye protection
- No loose clothing
- No open flames
- Use on a stable surface

Store saw blades and tensioner as indicated. Note order and position.

Press slightly to make lock-tounge snap in. If tubes do not telescope all the way together, twist crossbar and try again.

LIFETIME WARRANTY

UPGRADE INNOVATIONS



Upgrade Innovations, 1886 Belle Isle Place, North Vancouver BC, V7P 1X8, Canada
 e-mail: info@upgradeinnovations.com website: www.upgradeinnovations.com
 Tel: 604 984 3327 U.S. Patent 6,298,564 B1, Lifetime Warranty, Made in Canada